

Quick Start



Help us improve the Bimplus API doc by providing your valuable comments. You can find the comment section at the bottom of the page.

Standard Procedure



Developers please use <https://api-stage.bimplus.net/v2> (stage version of Bimplus API) and <http://portal-stage.bimplus.net/> (stage version of Shop /Portal) for testing purposes. The production version of the portal is located under <https://portal.bimplus.net/> and the base url of the API is different for the production version.

Generally, the Bimplus REST API calls consist of five steps for accessing the resources.

1. Developer Registration

Generally our portal [Allplan Bimplus](#) is the first place of contact of the user for using the Bimplus platform.

Please do the developer registration [here](#).

You can find step by step manual [here](#).

When you have any problems with the registration contact us [here](#).

2. Authentication token request

The authentication request for accessing the BimPlus resource should be sent in the JSON format using the [OIDC Authorization service](#). The registered user name and password in the [Bimplus portal](#) should be provided here.

For example, you can enable the OAuth 2.0 authentication process directly in your REST-client and it will automatically create and refresh tokens when needed.

It is recommended to use browser UI to login and logout with OIDC server. For this process, you can specify discovery URL and retrieve JSON with latest settings there.

Environment	Discovery URL
Development	https://api-dev.bimplus.net/v2/.well-known/openid-configuration
Stage	https://api-stage.bimplus.net/v2/.well-known/openid-configuration
Production	https://api.bimplus.net/v2/.well-known/openid-configuration

Received token should be directly used to access BimPlus resources after receiving it from OIDC. Refreshing and revoking of the tokens are also managed by OIDC, not BimPlus. Old authentication service in BimPlus remains only for backward compatibility and will be removed in 2026.

Please, use the client_id from the request and regenerate the token (using the same API call with client_id as the additional parameter) for having the possibility to login multiple times at the same time. For more information, see [here](#)

HTTP Method

POST

URL / Resource / Parameters

Resource: authorize

URL: <https://api-stage.bimplus.net/v2/authorize>

JSON Structure:

Name	Mandatory / Optional	Type	Description
user_id	mandatory	string	The email address of the user
password	mandatory	string	The user's password

client_id	optional	string	The identifier of the used client (browser, Apps etc)
application_id	mandatory	string	The id of the application

Description

Obsolete. Authenticates a user and returns a token which can be used for further API calls for accessing the desired resources.

Request

Headers
Content-Type: application/json

JSON
<pre>{ "user_id" : "test@bimplus.net", "password" : "test", "application_id" : "6C12345D9B0C4F3C23ABB5721D098F7B" }</pre>

Response

Status
Status: 200 OK

JSON
<pre>{ "access_token": "9c1874a62c974dcfa75e0132c423a088", "expires_in": 2591999, "client_id" : "1FD44C0E-DCB4-11E2-A114-67286288709B" "token_type": "BimPlus" }</pre>

3. Receive the authentication token

Obsolete. The token is received in the request.

HTTP Method

POST

URL / Resource / Parameters

Resource: authorize

URL: <https://api-stage.bimplus.net/v2/authorize>

Description

Authenticates a user and returns a token which can be used for further API calls for accessing the desired resources.

Request

Headers
Content-Type: application/json

JSON

```
{
  "user_id" : "test@bimplus.net",
  "password" : "test",
  "application_id" : "6C12345D9B0C4F3C23ABB5721D098F7B"
}
```

Response

Status

Status: 200 OK

JSON

```
{
  "access_token": "9c1874a62c974dcfa75e0132c423a088",
  "expires_in": 2591999,
  "client_id" : "1FD44C0E-DCB4-11E2-A114-67286288709B"
  "token_type": "BimPlus"
}
```

where,

access_token	The token to be used in any further API calls within the HTTP headers
expires_in	The remaining lifetime on the access token in seconds
client_id	The identifier of the used client (browser, Apps etc)
token_type	The type of token – currently we use ,bimplus'

4. Get the team information

The team has to be specified and setup through the [Bimplus portal](#) as so-called [slugs](#) to present a [clean URL](#) . Slugs are lowercase unique identifiers based on English characters and numbers. The team slug will be used to know which tenant database to work on.

HTTP Method

GET

URL / Resource / Parameters

Resource: teams

URL: <https://api-stage.bimplus.net/v2/teams>

Description

Get all the available teams.

Request

Headers

Authorization: BimPlus 9c1874a62c974dcfa75e0132c423a088
Content-Type: application/json

Response

Status


Status: 200 OK

JSON

```
[3]
0: {
  id: "c8c8e6f2-4495-484c-929d-0049f1f9d4ff"
  name: "!!!!!!_VORTEILSHAUS V40 SD45 Traufeingang"
}-
1: {
  id: "2d703abe-b4f9-407c-af53-a39c5b7ba872"
  name: "__5 999 Parklife Salzburg Lehen"
}-
2: {
  id: "c480cc54-aec4-4bef-8d35-93bb090e1aba"
  name: "0811-Wohnhaus Kraus - Carport1"
}
```

Tools

Plugins for doing REST based calls (REST Client)

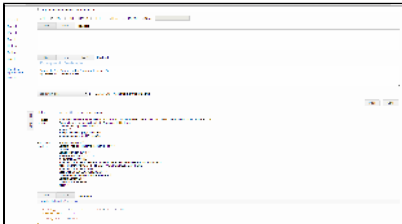

Chrome --> [Advanced REST client](#), [Postman - REST client](#), [Simple REST client](#)

Firefox --> [RESTClient](#)

For validating or formatting JSON --> <http://jsonlint.com/>