

Attributsetvorlagen definieren oder ändern

If you want to exchange data in accordance with the IFC standard, you need a basic set of properties. However, creating a property set template from scratch is not only time-consuming but also prone to errors. Therefore, you *cannot* do this in Bimplus.

But you can create your own property set templates by copying the predefined property set templates and customizing these copies to suit your needs and requirements. All predefined property set templates contain the minimum of property sets required in accordance with the IFC standard. This ensures that all property set templates derived comply with the minimum requirements in accordance with the IFC standard.

To create your own property set template, copy one of the predefined property set templates and customize the copy by changing or adding property sets.

Topics on this page:



- [Copying property set templates](#)
- [Changing property set templates](#)
- [Deleting property set templates](#)

Copying property set templates

To copy a property set template

This is only possible if ...

Property manager is open (see ["Opening the property manager"](#))

1. Open the list box for the property set template (on the left side of the table header) and select the template that you want to copy.
2. Click  **Property set templates options** to the right of the list box and select  **Copy**.
3. You can see the **Copy** dialog box. Enter a name for the new property set template and click **COPY**.

[Back to top](#)

Changing property set templates

To change a property set template

This is only possible if ...

Property manager is open (see ["Opening the property manager"](#))
You copied a property set template (see ["Attributsetvorlagen kopieren"](#)).

1. Open the list box for the property set template (on the left side of the table header) and select the template copied.
2. Go to the **Object** column and select the object type or object class for which you want to change one or more property sets.
3. Edit the property sets as described in ["Changing property sets or defining new property sets"](#).

[Back to top](#)

Deleting property set templates

You can delete user-defined property set templates only. The predefined property set templates cannot be deleted.





Important!

You can delete a user-defined property set template only if this template is not used by a project of the team.

To delete a property set template

This is only possible if ...

Property manager is open (see ["Opening the property manager"](#))

1. Open the list box for the property set template (on the left side of the table header) and select the template that you want to delete.
2. Click  **Property set templates options** to the right of the list box and select  **Delete**.
3. Click **DELETE** to confirm the prompt.

[Back to top](#)